


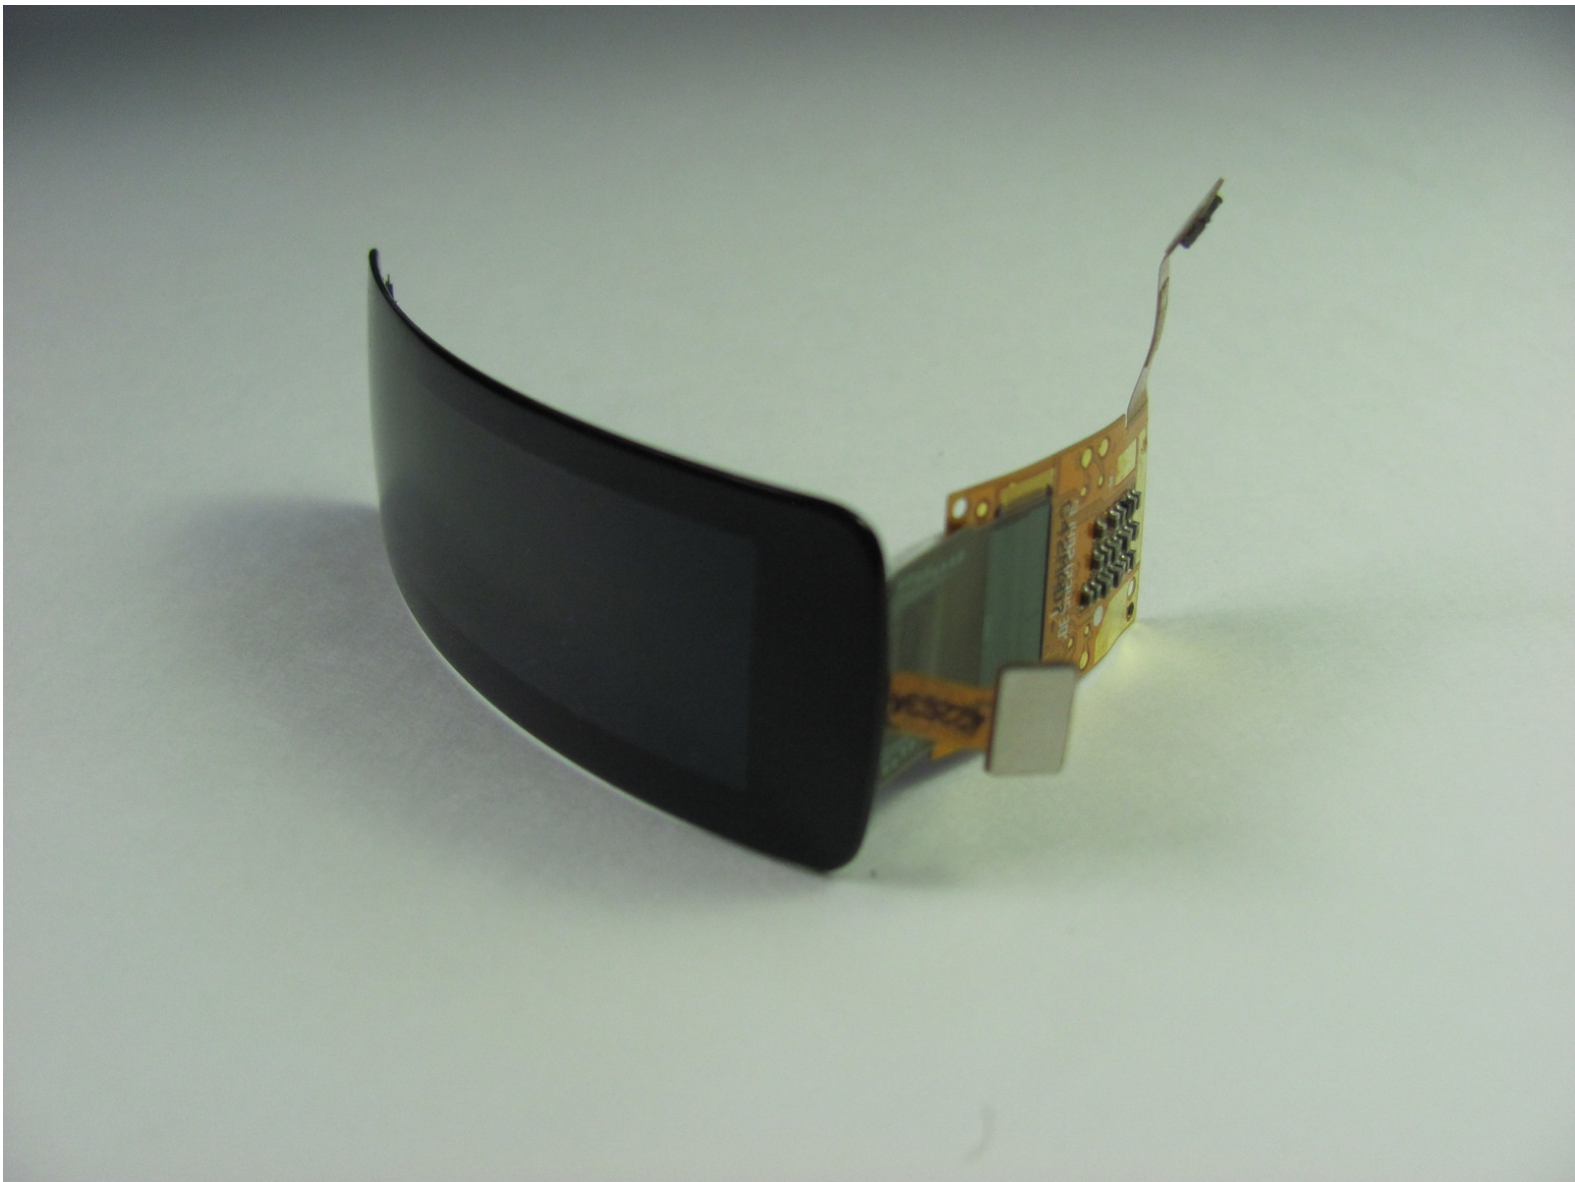

# Samsung Gear Fit Screen Replacement

This guide will cover removing and replacing the screen of the Samsung Gear Fit.

Written By: Nathan Powell





## TOOLS:

- [Heat Gun](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Tweezers](#) (1)
  - [iOpener](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Watch Band




- Place your thumbs on the ends of the screen.
- Push the watch outward while pulling the band away from the watch.

## Step 2 — Screen




 Heating the device with a hair dryer may warp the screen or damage the device. It is preferable to use an iOpener for this step.


 For step-by-step instructions on using an iOpener, see the [iOpener Instructions](#).

- Use a hair dryer, heat gun, or an iOpener to heat the Gear Fit for 1-2 minutes until it is hot to the touch.




## Step 3

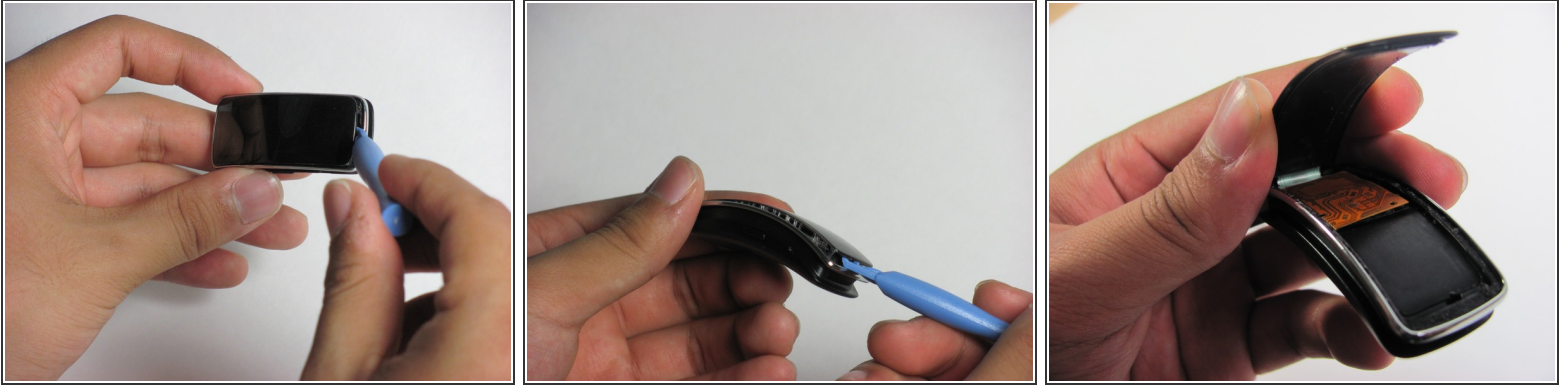

 The screen is connected to the device by a ribbon cable on the left side with the power button facing you. Do not try to completely separate the screen from the device yet, and be careful.

- Gently pry the screen loose using a plastic opening tool.


 If the screen doesn't easily come loose, more heating may be required

## Step 4




- Using tweezers as a lever, pry the inner assembly out of the external casing.
- This will be harder than removing the screen. Moderate force may be required.

## Step 5

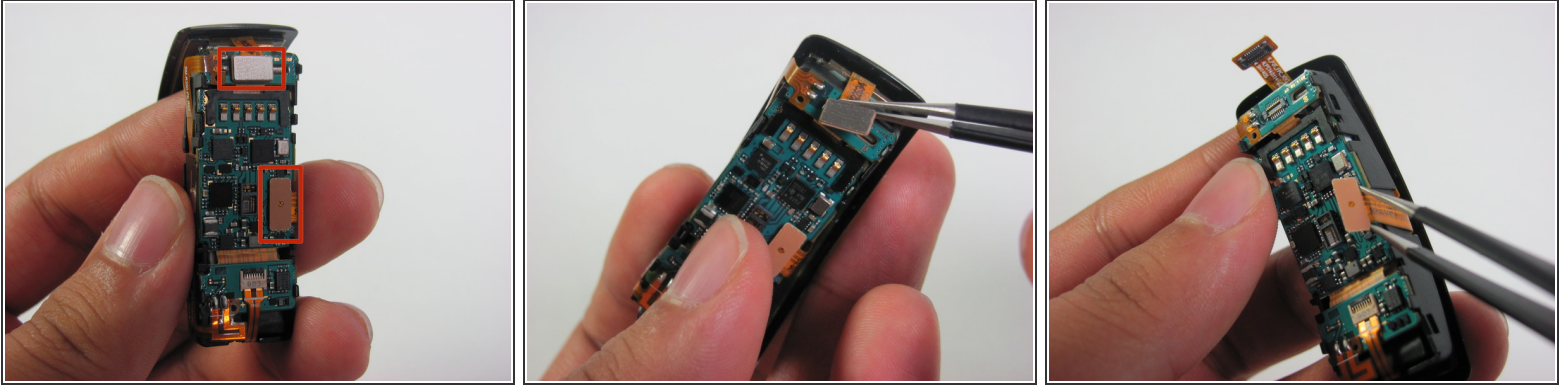

- Disconnect the ribbon cables connecting the screen to the motherboard by lifting their metal connectors up off of the board with tweezers.

## Step 6

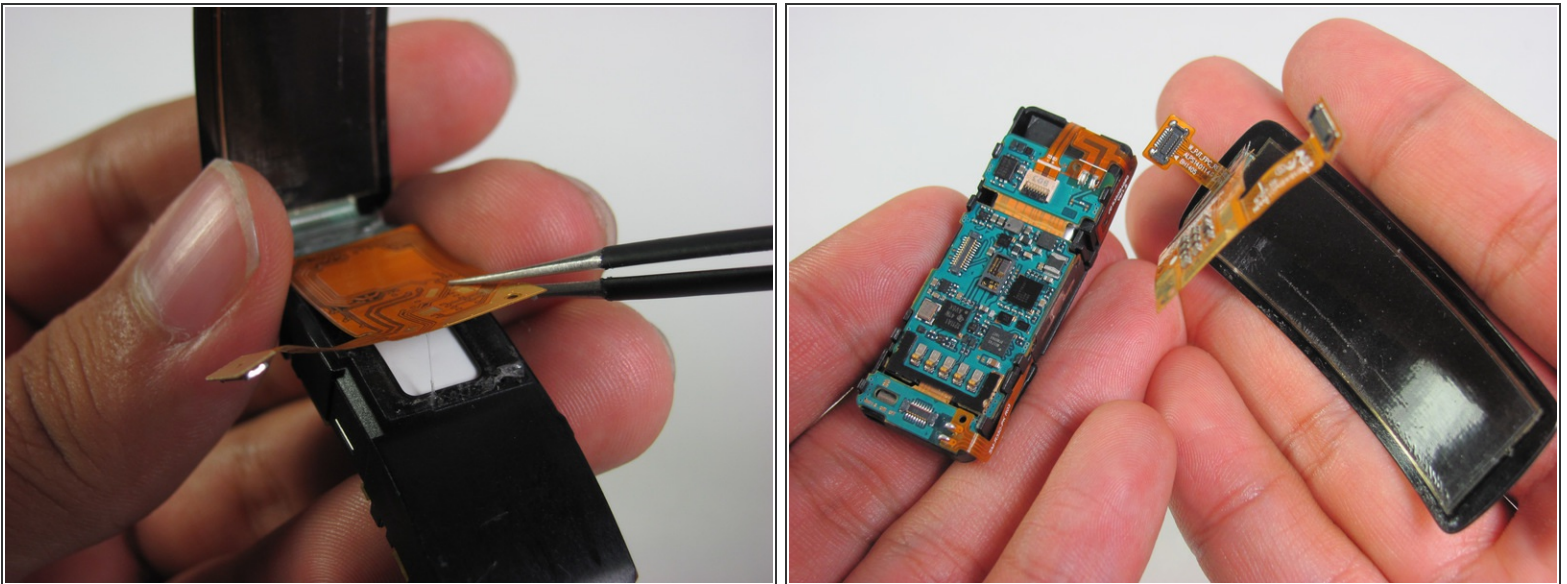

- Gently peel the screen assembly up and away from the device using tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:39:05 PM.